

NOTE: Retain this sheet for future reference

This manual describes the installation and operation of the Models FW300010 non-catalytic wood heater. This heater meets US Environmental Protection Agency's emission limits for wood heaters. Under specific conditions this heater has been shown to deliver heat at rates ranging from 12,000 to 55,100 BTU per hour.

Model No. FW300010

This unit has been listed by Warnock Hersey Limited to meet or exceed ULC S-627-00 Canada and UL 1482 U.S.

6" Flue Required

Figure A: Clearance from combustible constructions

A minimum clearance of 18" (457mm) to the chimney connector may be required by the authority having jurisdiction.

Contact your local building inspector prior to installation. A permit may be required in your area.

From Heater

- A** Sidewall.....26" (660 mm)
- B** Backwall.....15" (381 mm)
- C** Corner.....12" (305 mm)

From Chimney Connector

- D** Sidewall.....35-1/2" (902 mm)
- E** Backwall.....18-1/2" (470 mm)
- F** Corner.....22" (559 mm)
- G** Ceiling.....54" (1372 mm)

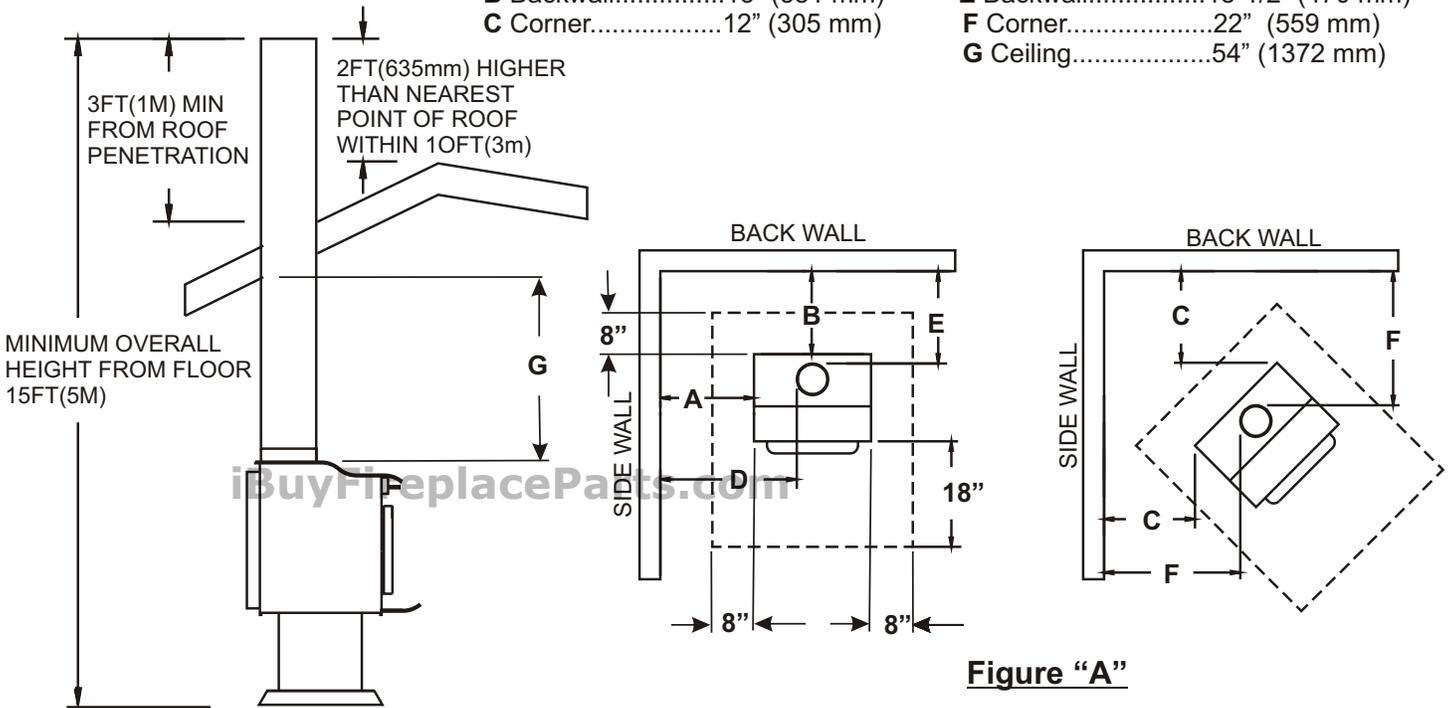


Figure "A"

Unit must be placed on a noncombustible floor protection equivalent to 3/8" millboard. Consult your local building authorities for further information.

HANDLE
Twist spring handle **SPRING** in counter clockwise motion while pushing on to handle; spring handle will "thread" down to desired location.

CAUTION: Do not open fire-door to a point where it would be in contact with the combustible sidewall.


OPTIONAL FAN
An optional heat exchange blower is available for this wood burning appliance. To order please see the local dealer where you purchased your appliance.

CAUTION: BRICK FOR ASH DRAWER MUST BE INSTALLED BEFORE OPERATION OF WOOD HEATER



Inlet Air Control Settings

Desired Burn Setting	Inlet Air Setting	**Approx. BTU Output
Low	Closed Fully	12,000
Med / Low	¼ Open	13,400
Med / High	¾ Open	17,700
High	Fully Open	55,100


**Performance may vary depending on actual home operating conditions

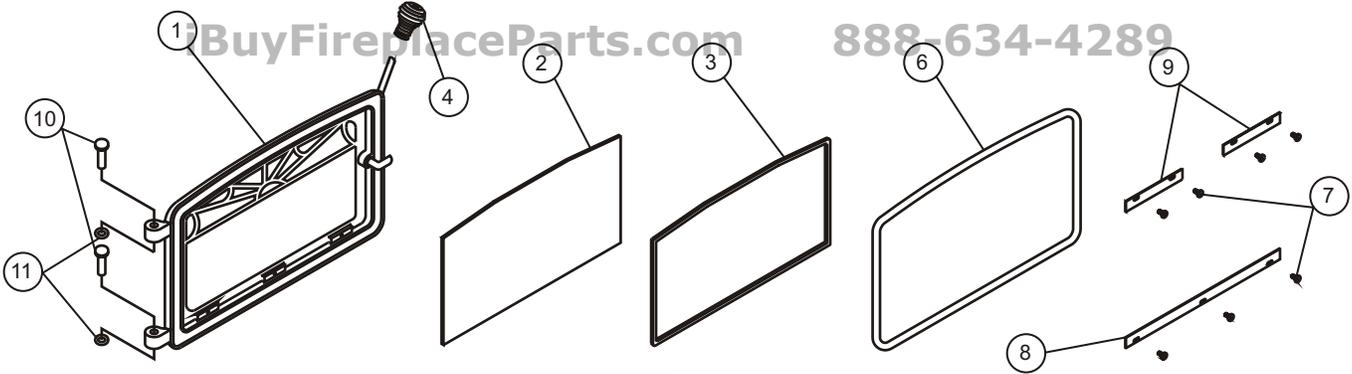

PARTS LIST			
ITEM	QTY	DESCRIPTION	PART NO.
1	1	DOOR ASSEMBLY	S31338
1	1	DOOR (NO GLASS)	S41477
2&3	1	GLASS AND GASKET	S31141
3	4.3ft	1/8" GLASS GASKET	S15001
4	1	SPRING HANDLE	S11007
5	1	AIR CONTROL SPRING HANDLE	S11008
6	5.1ft	5/8" DOOR GASKET	S15011
7	7	SCREW	S11086
8	1	GLASS CLIP	S37026
9	2	GLASS CLIP	S37018
10	2	HINGE PIN	S11005
11	2	PUSH NUT	S11090
12	4	FIREBRICK LT 7-3/4"x4-7/16"x1-1/4"	S16222
13	1	FIREBRICK LT 4-1/2"x4-7/16"x1-1/4"	S16046
14	15	FIREBRICK LT 9"x4-7/16"x1-1/4"	S16040
15	1	FIREBRICK LT 9"x2-1/2"x1-1/4"	S16216
16	1	FIREBRICK FOR ASH DRAWER	S16214
17	4	SECONDARY AIR TUBE	S32594
18	4	COTTER PIN	S11421
19	1	BAFFLE ASSEMBLY	S41468

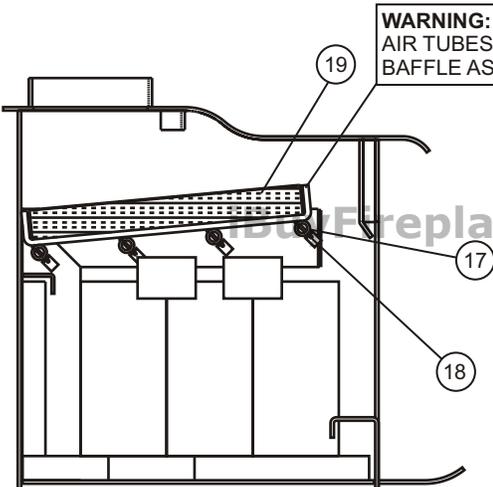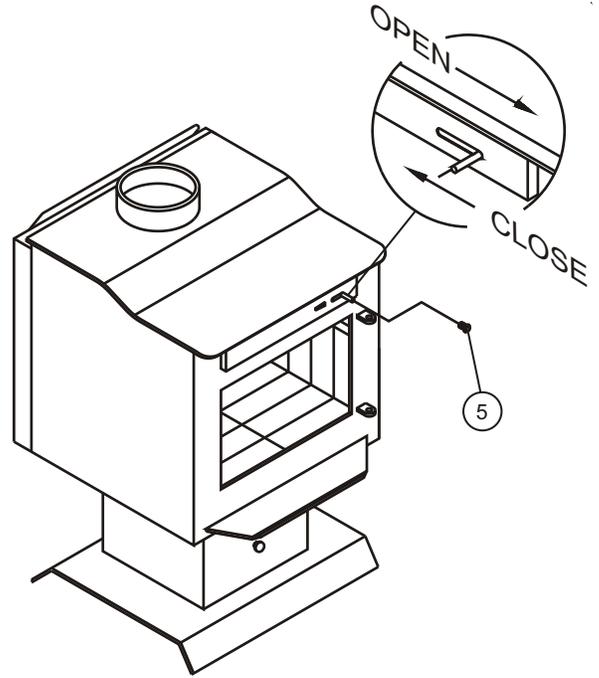

WARNING: BEFORE REMOVING SECONDARY AIR TUBES SUPPORT BAFFLE ASSEMBLY. BAFFLE ASSEMBLY IS VERY HEAVY.

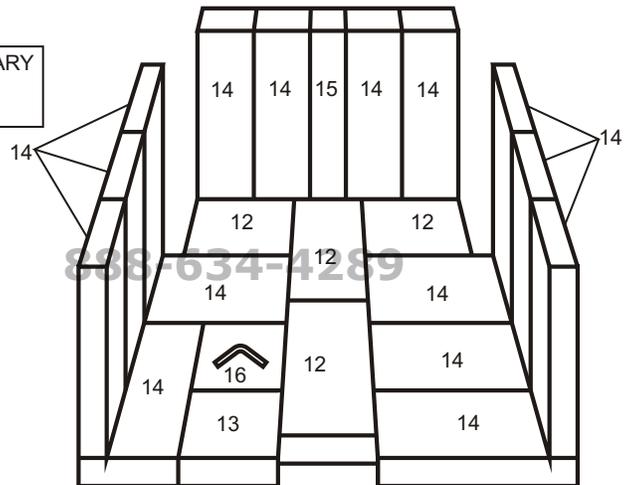

BRICK PATTERN