
iBuyFireplaceParts.com

888-634-4289

iBuyFireplaceParts.com


Haugh's Since 1938

is Manual describes the installation and operation of the Model S-408 E noncatalytic wood heater. This heater meets U.S. wironmental Protection Agency's emission limits for wood heaters sold after July 1, 1990. Under specific conditions this rater has been shown to deliver heat at rates ranging from 10,000 to 37,900 BTU per Hour.

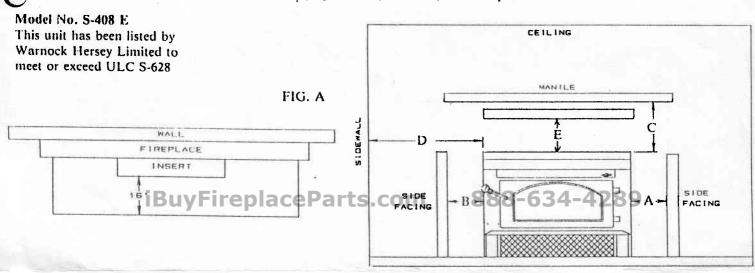

CLEARANCE FROM COMBUSTIBLE CONSTRUCTIONS




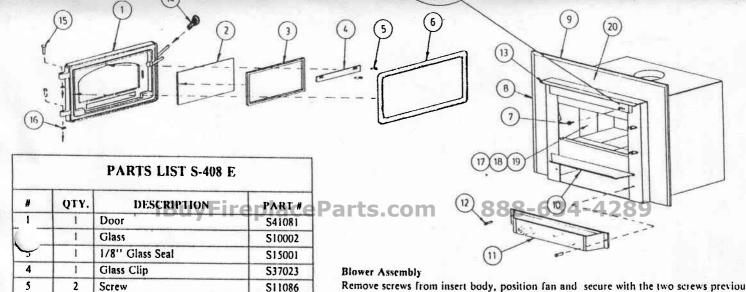


Remove screws from insert body, position fan and secure with the two screws previously removed. Blower unit should be removed occasionally for inspection, cleaned and lubricated when required (once or twice during the heating season should be sufficient). Be sure to disconnect power supply before servicing fan.

STEPS FOR BRICK PLACEMENT

 - 1) Back brick 'A' to base of stove.
- 2) Bottom brick 'B'.
- 3) Angled brick 'C' slide to rear.
- 4) Side brick 'D' place front pieces first then add two middle bricks.

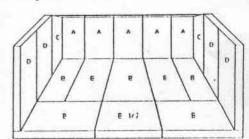



S11086

S15011

\$11008

S32019

S32018

S32015

\$31104

S11087

S32055

S11007

 
S11005

S11090

\$16001

\$16002

S16013



SPRING HANDLE

6

8

9

10

11

12

13

14

15

16

17

18

19

20

1

2

1

1

2

1

1

2

2

16

1

2

Twist spring handle in a counter clockwise motion while pushing on to handle; spring handle will "thread" down to desired location.

5/8" Door Seal

Shroud Side Trim

Shroud Top Trim

Fan Assembly

Brass Ash Fender Trim

Fan Mounting Screw

Brass Body Trim

Brick 9" x 4-1/2"

Brick 4-1/2" x 4-1/2"

Spring Handle

Hinge Pin

Spring Nut

Brick Angled

Shroud

Air Control Spring Handle

Dart No. \$10006





Trim is designed to simply push onto edge of stove top/ashfender. Be sure to remove protective plastic coating after installation.